


IF NECESSARY
DRILL WITH 1/16" BIT
AT LEAST 1/16" DEEP
FOR FITTING
MAGNETS
IN BOTH THE BASE
AND SUB-BASE


SUB-BASE

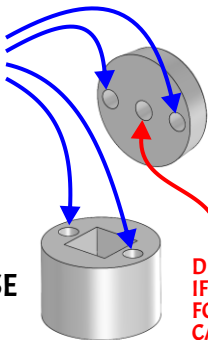

BASE


DRILL THROUGH
IF NECESSARY
FOR MAST OR
CABINET

GLUE MAGNETS
IN PLACE IN THE SUB-BASE
USING CA GLUE OR EPOXY

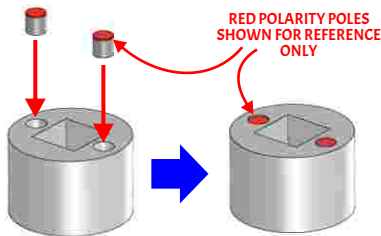

RED POLARITY POLES
SHOWN FOR REFERENCE
ONLY

GLUE MAGNETS IN
PLACE IN THE BASE
TAKING CARE TO
MAKE SURE THE
POLARITY
IS CORRECT

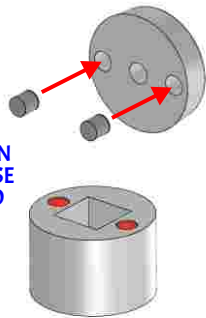

CUT THE MAST/TUBE FLUSH WITH THE BOTTOM OF THE BASE TO ALLOW THE SIGNAL ASSEMBLY TO TIP OVER WITHOUT BEING DAMAGED.

THE SUB-BASE CAN BE MOUNTED AT OR JUST BELOW "GROUND" LEVEL WITH THE BASE SITTING AT "GROUND" LEVEL