



# 1 BUILD THE TRUCK


NOTE:  
CUT THE FRAME  
1.25" FROM THE  
SEAT LOCATOR

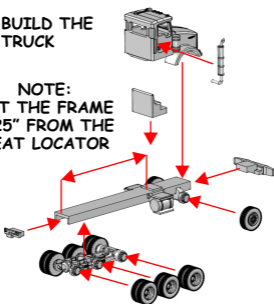


# 2 ADD THE DUMP BASE FRAME

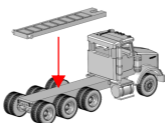


# 3 ASSEMBLE THE DUMP BODY

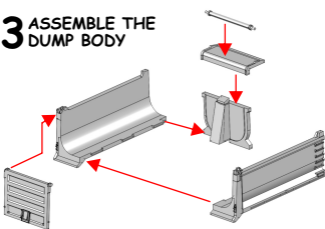

# 4 ADD THE DETAILS

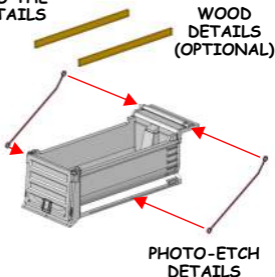


# 5 FINAL ASSEMBLY

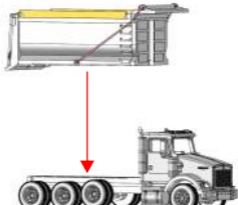

NOTE:  
THE INCLUDED 3/64" TUBING  
WILL TELESCOPE INTO  
THE 1/16" TUBE

# 6 OPTIONAL ASSEMBLY

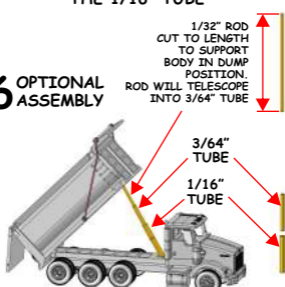

# #76

# KW CLASS HEAVY DUTY DUMP TRUCK