



PARTS

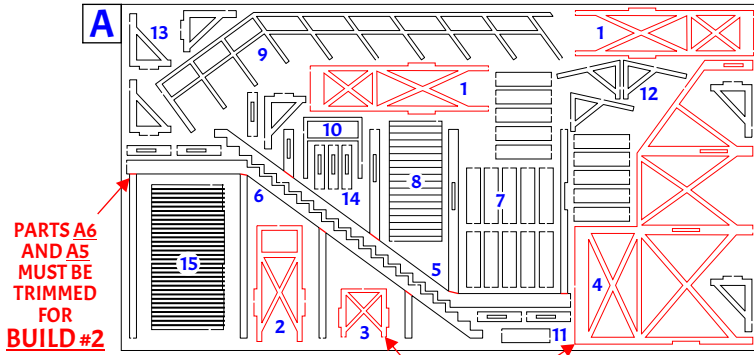


PARTS A6 AND A5 MUST BE TRIMMED FOR BUILD #2

PARTS OUTLINED IN RED NOT USED FOR BUILD #2


STEP 1 BUILD #1 FRAME SUPPORT

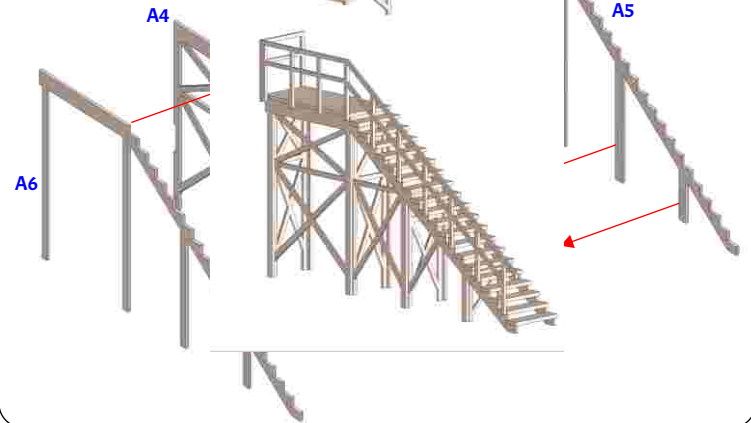

STEP 2



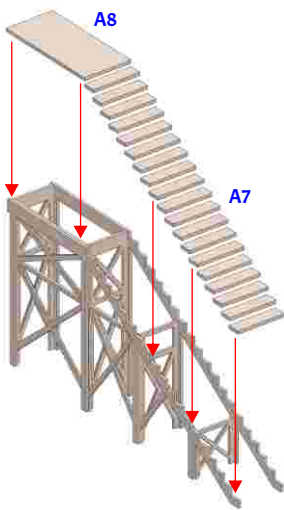


STEP 3

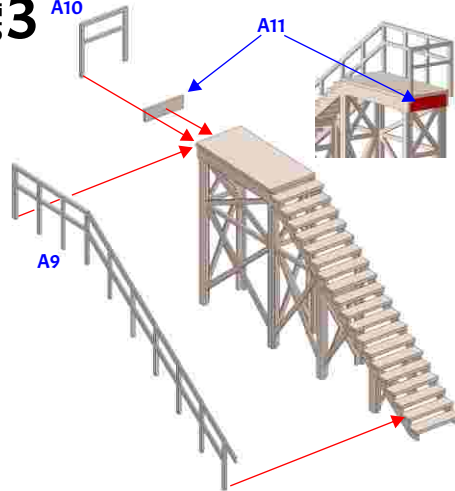

OPTIONS

BUILD #2 WALL BRACE SUPPORTS

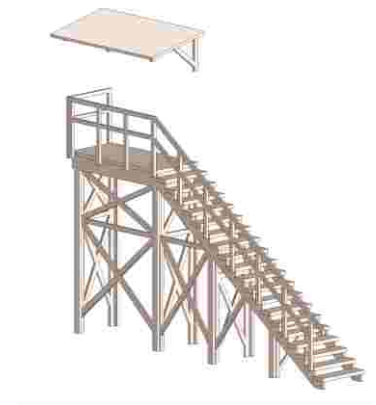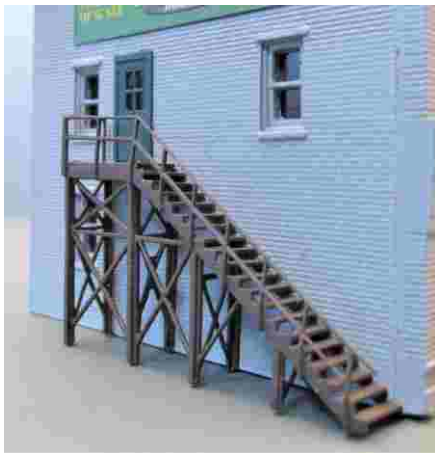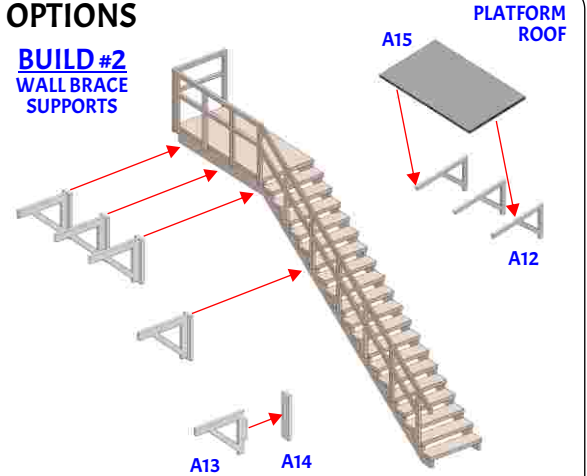

The key to gluing the steps in place is to first install every other one, leaving room to add new steps without bumping the ones you've already put in place.

Then come back and install the rest of them once the glue has dried on the first set.... Raul Perez