

**GETTING STARTED**

**PLEASE!** READ THROUGH THE ENTIRE INSTRUCTIONS BEFORE BEGINNING ASSEMBLY. SOME PARTS MUST BE IN PLACE BEFORE OTHERS CAN BE ADDED. EXAMPLE: THE ROOF PART 1 IN STEP 3 MUST BE IN PLACE BEFORE THE SUB-ROOF PARTS FOR THE SECOND FLOOR CAN BE ADDED.

WE RECOMMEND THAT ALL PARTS BE PAINTED BEFORE ASSEMBLY AND CAN BE PRIMED (IF NECESSARY) AND PAINTED WHILE THEY ARE STILL ON THE SPRUES.

WE RECOMMEND VALLEJO BRAND OF ACRYLIC COLORS AND A THICK CA TYPE SUPER GLUE FOR CONSTRUCTION.

THE WINDOWS AND DOORS CAN ALSO BE PAINTED AND ATTACHED TO THE WALLS BEFORE ASSEMBLY. THE WINDOWS ARE CUT FROM A MATERIAL THAT HAS AN ADHESIVE BACKING. CLEAR FIM CAN BE USED FOR GLAZING - REMOVE THE BACKING FROM THE WINDOW AND ATTACH TO A CLEAN SHEET OF CLEAR FILM. CUT OUT AROUND THE WINDOW USING A SHARP HOBBY KNIFE.

TEST FIT EACH PART BEFORE GLUEING - TRIM TO FIT IF NECESSARY.

GRAPHICS ARE SUPPLIED BOTH IN PRINTED PAPER FORM AND WATERSLIDE DECALS.

**PARTS LAYOUT**

PARTS ARE MARKED AND CALLED OUT ON EACH STEP OF ASSEMBLY INSTRUCTIONS.

**MAIN STRUCTURE WINDOWS AND DOORS**

**STORE DOORS AND WINDOWS**


**PORCH TRIM DETAILS**

**ROAD SIGN**


**CAST METAL DETAILS**

PRIME THE ROAD SIGN WITH FLAT WHITE PAINT. CAREFULLY TRIM THE SIGN GRAPHIC AND APPLY WITH THICK CA TYPE SUPER GLUE.

1 ATTACH THE DOORS AND WINDOWS TO THE WALL PARTS

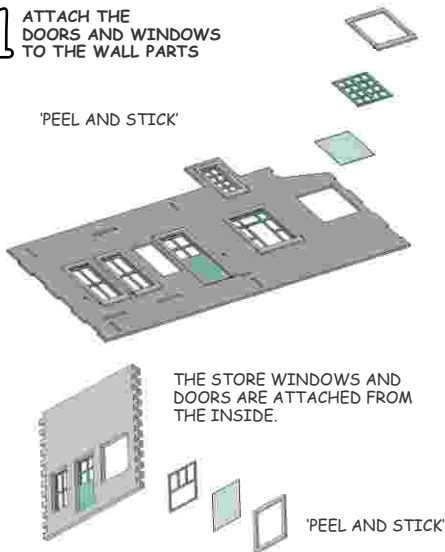


2 BUILD THE STRUCTURE CONTINUED...

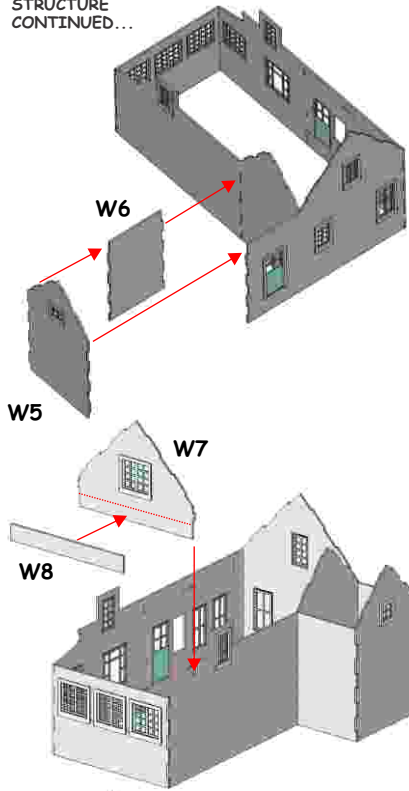


2 BUILD THE STRUCTURE

THE WINDOWS AND DOORS HAVE A DOUBLE STICK ADHESIVE BACKING TO ALLOW THEM TO BE APPLIED TO THIN, CLEAR PLASTIC (NOT SUPPLIED). CUT THEM OFF THE PLASTIC WITH A HOBBY KNIFE AND THEN ASSEMBLE. WE RECOMMEND THAT YOU PAINT THE WINDOWS AND DOORS WHILE THEY ARE STILL ATTACHED TO THE FRET. SPRAY PAINT WORKS BEST FOR THIS.

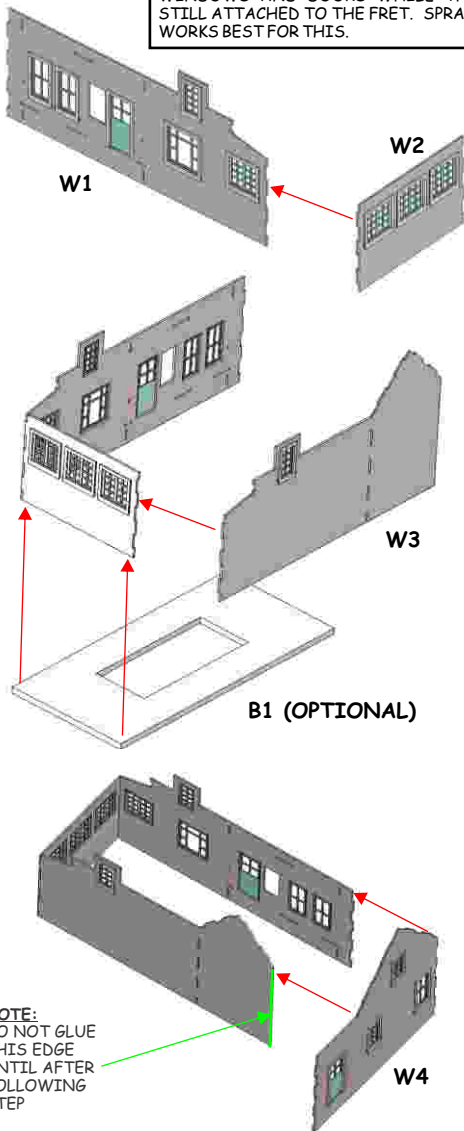


NOTE:  
DO NOT GLUE THIS EDGE UNTIL AFTER FOLLOWING STEP



2 BUILD THE STRUCTURE CONTINUED...

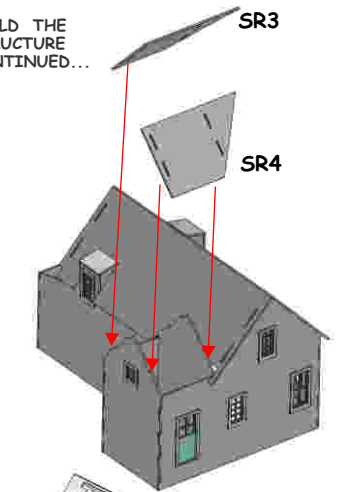


3 ADD THE ROOF

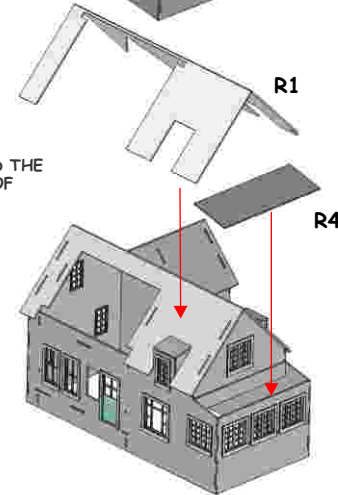


LIGHTLY SCRIBE CENTER RIDGE LINE WITH KNIFE.  
CAUTION: DO NOT CUT ALL THE WAY THROUGH THE ADHESIVE BACKING. PEEL THE BACKING AWAY FROM THE ROOF PAPER. APPLY LIGHTLY TO SUB-ROOF AND, WHEN IN CORRECT POSITION, PRESS FIRMLY IN PLACE.

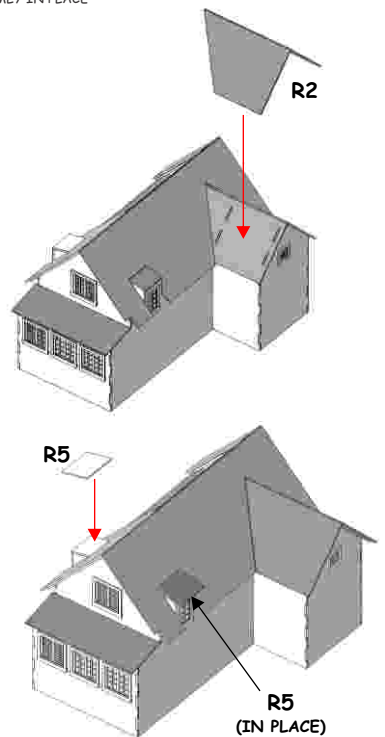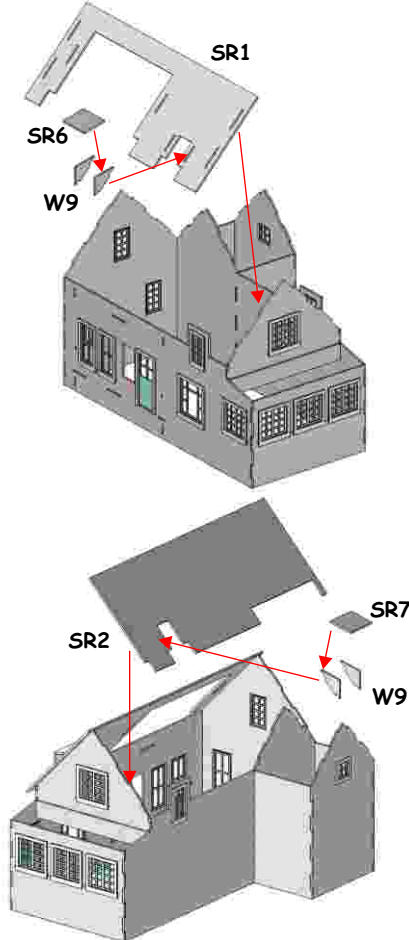


**4** BUILD THE SECOND FLOOR

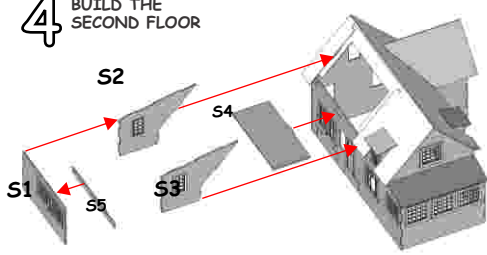


**7** ATTACH THE PORCH

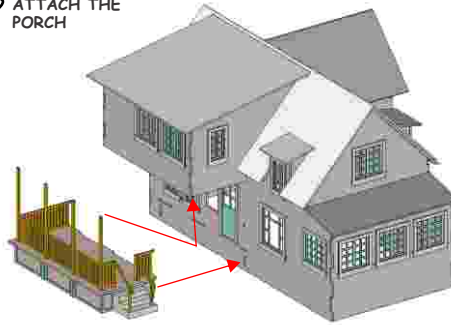


**8** BUILD FRED'S ONE STOP CONTINUED...

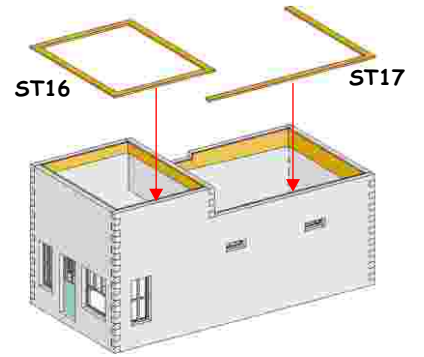


**5** FINISH THE ROOF

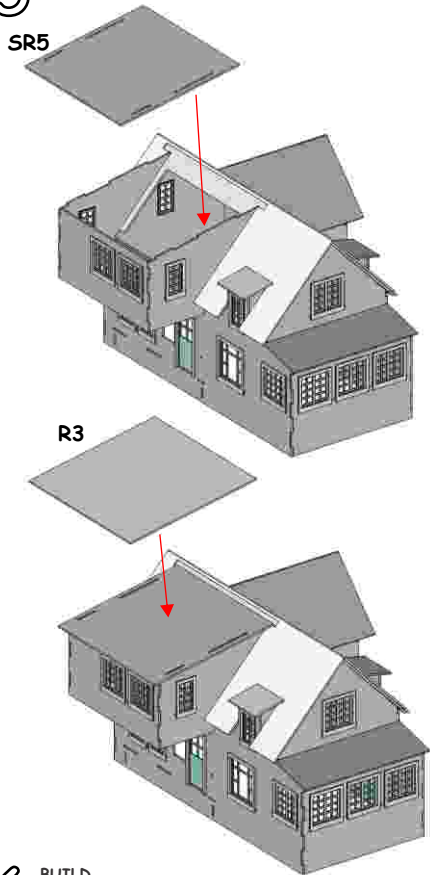





**8** BUILD FRED'S ONE STOP

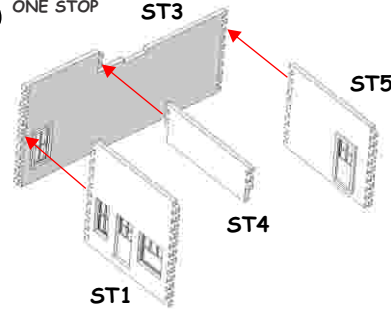



INSERT ROOF PARTS FROM THE BOTTOM

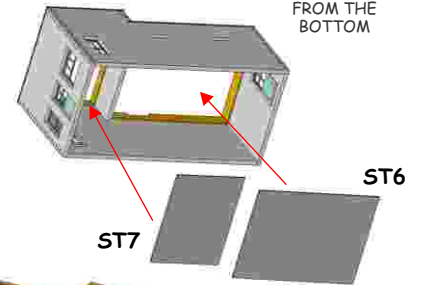

**6** BUILD THE PORCH

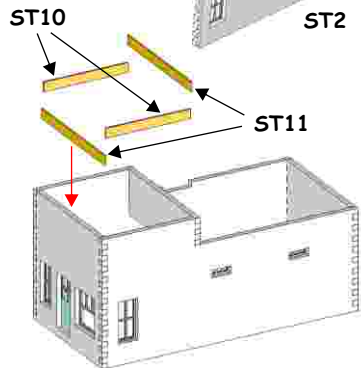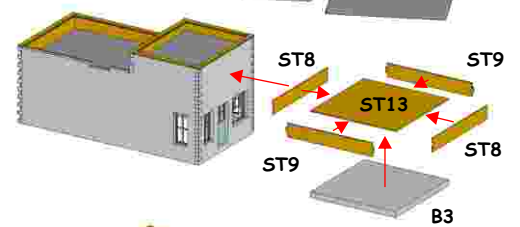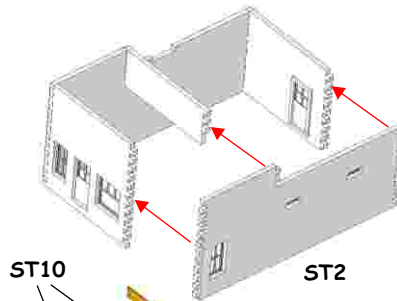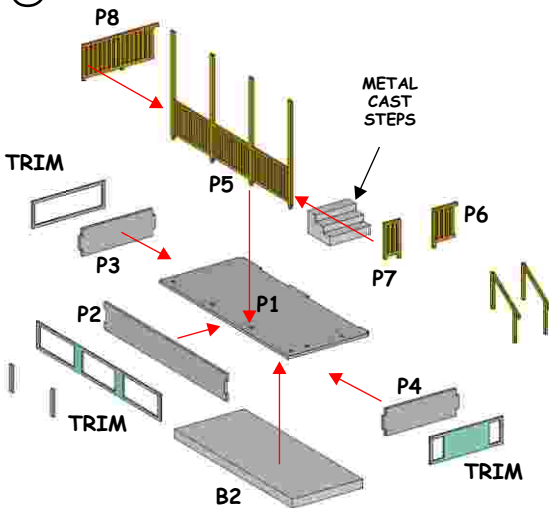


**9** BUILD THE ROOF TOP SIGN.

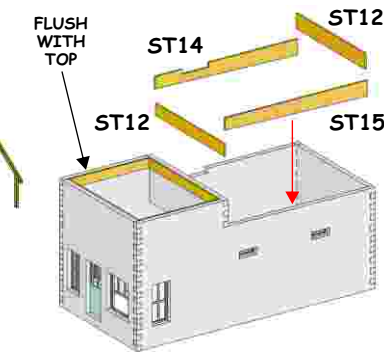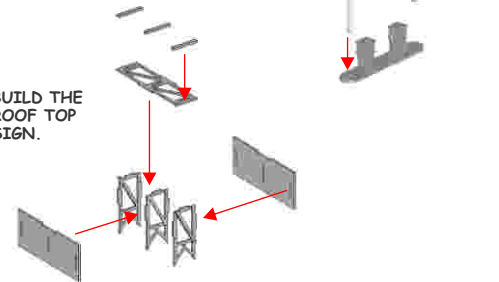

**10** FINISH WITH TRIM

LIGHTLY SCRIBE CENTER LINE OF THE TRIM WITH KNIFE THEN FOLD AND APPLY.

CAUTION: DO NOT CUT ALL THE WAY THROUGH THE ADHSEIVE BACKING


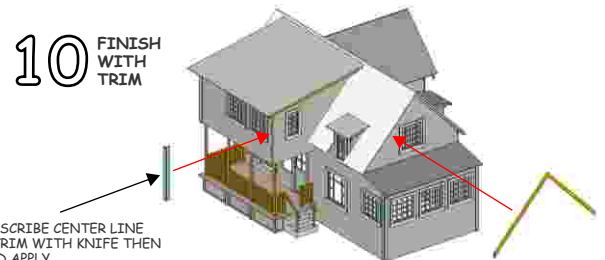


**METAL PARTS PAINTING INSTRUCTIONS:**

CLEAN METAL PARTS IN WARM SOAPY WATER AND THOROUGHLY DRY BEFORE PAINTING. ALTERNATIVELY, PARTS MAY ALSO BE DIPPED INTO AN ALCOHOL BATH AND DRIED THOROUGHLY.

SODA MACHINES AND ICE BIN MUST BE PAINTED WHITE (AT LEAST THE SIDE WHERE DECAL WILL BE PLACED). WATERSLIDE DECALS ARE NOT PRE-CUT AND MUST BE CUT AS CLOSE TO THE EDGE OF THE GRAPHIC AS POSSIBLE. SOAK EACH CUT DECAL FOR 30-45 SECONDS, FACE UP, FLOATING ON SURFACE OF ROOM TEMP. WATER.

**11** ADD THE AWNING AND PORCH DETAILS

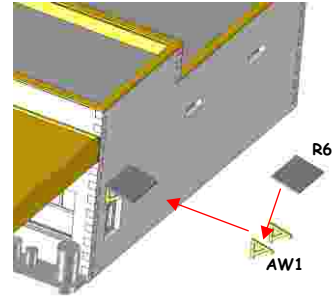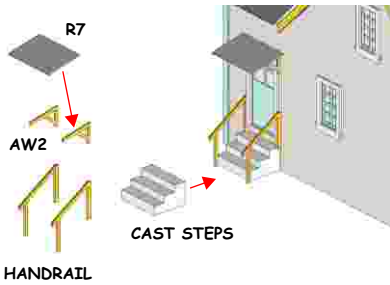

We make every effort to provide quality products with our "Fidelity of Scale" promise. If you are missing parts or have any questions regarding our kits, please do not hesitate to contact us.

Keep in touch with news from Showcase Miniatures by "liking" our Facebook page or signing up for the newsletter on our website.

13536 County Road 45  
Tuskegee, AL 36083  
334-750-3276  
www.showcaseminiatures.net  
d@showcaseminiatures.net