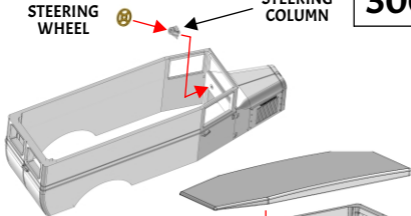
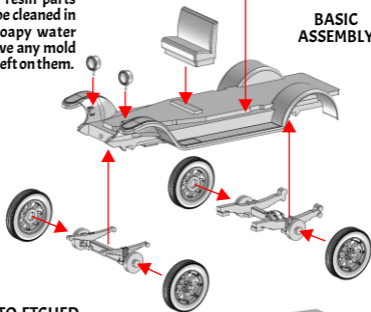
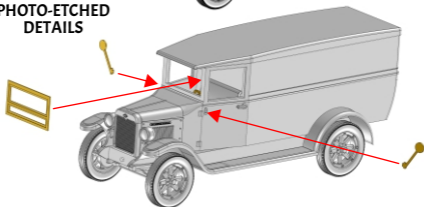


STEERING
WHEELSTEERING
COLUMN

Carefully clean away any flashing on the resin and metal parts. Metal parts can be cleaned in rubbing alcohol and the resin parts should be cleaned in warm soapy water to remove any mold release left on them.

BASIC
ASSEMBLYPHOTO-ETCHED
DETAILS

Window glazing is included in the kit. Use CANOPY GLUE to attach the glazing.

A waterslide DECAL is also included. The decals are NOT pre-cut and must be cut close to the edge of the graphic. Soak 30-45 seconds, FACE UP, floating on surface of room temp. water.